

# Drawing Scale

1049 kbadmin June 30, 2021 [Unique function](#) 0 5458

You can set the drawing scale before drawing, when you are using other tools (for example "Line Such as Chord" and "Modify Line width"), our software will adjust the scale automatically

**Menu :** Express > GstarCAD Tools > Drawing Scale

**Command Entry :** SASCL

## Operation steps:

1. Start the command.
2. Input a drawing ratio and enter to finish.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1049>