

# Rotate Cursors

1050 kbadmin June 30, 2021 [Unique function](#) 0 5338

The cursor can rotate anti-clockwise by 0 degree or 45 degree.

**Menu** : Express > GstarCAD Tools > Rotate Cursor > 0 or 45  
**Command Entry** : RTCUR0/RTCUR45 (0 degree/45 degree)

## Side Line

**Menu** : Express >GstarCAD Tools > Rotate Cursor > Side Line  
**Command Entry** :RTCUR1

## Operation steps:

- 1.Start the command.
- 2.Select the reference segment and system will align the X axis of the cursor to the selected segment.

## Real Time Rotate

**Menu** : Express > GstarCAD Tools > Rotate Cursor > Real Time Rotate  
**Command Entry** : RTCUR

## Operation steps:

- 1.After executing the command, the command line prompts as below.

```
Command: _rtcur  
Counterclockwise coarse (A) / clockwise coarse (D) / counterclockwise Fine Tuning (W) / clockwise Fine Tuning (S) / normal (0):0  
428.5126,132.3789,0      SNAP   GRID   ORTHO   POLAR   OSNAP   OTRACK   LWT   DYN   MODEL
```

- 2.You can use the AWS D four keys to control the cursor direction until you are satisfied and press enter.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1050>

