

Control Break Width

1058 kbadmin June 30, 2021 [Unique function](#) 0 4669

This function is used to set break width for Cross objects.

Menu : Express > GstarCAD Tools > Control Break Width
Command Entry : CBKWID

Operation steps:

- 1.Start the command.
- 2.Enter the width of the break space.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1058>