

# ANGDIR system variable

1318 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 11622

## Function Description:

The **ANGDIR** system variable is used to set the direction of positive angle. It is measures from angle 0 relative to the orientation of current UCS.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : anticlockwise

**1** : clockwise

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1318>