

# ANNOALLVISIBLE system variable

1319 GstarCAD MY /KW July 7, 2021 [System Variables](#) 0 3325

## Function Description:

The **ANNOALLVISIBLE** system variable is used to hide or display annotative objects that do not support current annotation scales.

The **ANNOALLVISIBLE** system variable settings are saved separately for model and each layouts.

**Type :** Integer

**Saved in :** Drawing

**Initial value :** 1

**Range :** 0,1

## System Variable Value:

**0** : only display annotative objects that support current annotation scales

**1** : display all annotative objects

Note : when the **ANNOALLVISIBLE** system variable has set to be 1, it only display one scale expression, even if the annotation objects support multiple scales

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1319>