

# ATTIPE system variable

1327 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 4567

## Function Description:

The **ATTIPE** system variable is used to control the text format toolbar which displays together with in-place editor when modifying multiple text attributes.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** :display the abbreviated text format tool bar with in-place editor

**1** : display the full text format tool bar with in-place editor

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1327>