

# ATTMULTI system variable

1329 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 3628

## Function Description:

The ATTMULTI system variable is used to control whether it is available to create multiple text attributes.

**Type :** Integer

**Saved in :** Registry

**Initial value :** 1

**Range :** 0,1

## System Variable Value:

**0** : turn off all access to create multiple text attributes. It is still able to view and edit multiple text attributes.

**1** : turn on all access to create multiple text attributes.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1329>