

# BACTIONBARMODE system variable

1341 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 4515

## Function Description:

The **BACTIONBARMODE** system variable is used to control whether to display action bar or traditional action objects in block editor.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : display traditional action objects in block editor

**1** : display action bar in block editor

Note: when the **BACTIONBARMODE** system variable has set to be 1, the **BACTIONSET**, **BASSOCIATE**, and **BLOOKUPTABLE** commands are disabled.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1341>