

BACTIONCOLOR system variable

1342 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 3810

Function Description:

The **BACTIONCOLOR** system variable is used to set text color in block editor.

Type : Strings

Saved in : Registry

Initial value : 7

The valid value includes **BYLAYER**, **BYBLOCK**, and integers from 1 to 255. The True color is a strings with RGB in front and each value is separated by a comma. It is entered as the following way:
RGB:000,000,000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1342>