

BDEPENDENCYHIGHLIGHT system variable

1343 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 3632

Function Description:

The **BDEPENDENCYHIGHLIGHT** system variable is used to control whether the selected parameters, actions, and grips and their dependent objects highlighted or not in block editor.

Type : Integer

Saved in : Registry

Initial value : 1

Range : 0,1

System Variable Value:

0 : specify the dependent objects not to be highlighted

1 : specify the dependent objects to be highlighted

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1343>