

## BGRIPOBJSIZE system variable

1345 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 3480

### Function Description:

The **BGRIPOBJSIZE** system variable is used to set displaying size of customized grip relative to screen in block editor.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 8

**Range** : 1 ~ 255

The valid value is an integer between 1 and 255.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1345>