

# BLIPMODE system variable

1347 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 4246

## Function Description:

The **BLIPMODE** system variable is used to control the visibility of marker blips.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : turn off marker blips

**1** : turn on marker blips

This system variable has the same name as the **BLIPMODE** command.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1347>