

# BLOCKEDITLOCK system variable

1348 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 4334

## Function Description:

The **BLOCKEDITLOCK** system variable is forbid to open block editor or edit dynamic block definition.

**Type** : Integer

**Saved in** : Registry

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : allow to open block editor

**1** : forbid to open block editor

When set the **BLOCKEDITLOCK** system variable to be 1, it displays the "Properties" palettes by double-clicking the dynamic block. If it contained attributes in the block ,double-clicking the dynamic block could open the "Enhanced Attribute Editor" dialog box.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1348>