

# BLOCKEDITOR system variable

1349 GstarCAD MY /KW July 8, 2021 [System Variables](#) 0 4095

## Function Description:

The **BLOCKEDITOR** system variable is used to indicate whether the block editor is open or not.  
(Read-Only)

**Type** : Integer

**Saved in** : Not saved

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : indicate the block editor is not open

**1** : indicate the block editor is open

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1349>