

CANNOSCALEVALUE system variable

1357 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 3710

Function Description:

The **CANNOSCALEVALUE** system variable is used to display the current annotative scale.
(Read-Only)

Type: Real

Saved in : Drawing

Initial value : 1.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1357>