

CELTSCALE system variable

1360 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 3765

Function Description:

The **CELTSCALE** system variable is used to set scale factors for current object line type.

Type : Real

Saved in : Drawing

Initial value : 1.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1360>