

CELTYPE system variable

1361 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 3658

Function Description:

The **CELTYPE** system variable is used to set new object line types.

Type : Strings

Saved in : Drawing

Initial value : BYLAYER

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1361>