

CELWEIGHT system variable

1362 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 4129

Function Description:

The **CELWEIGHT** system variable is used to set new object line weight.

Type : Integer

Saved in : Drawing

Initial : value -1

Range : -1,-2,-3,0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

All values must be entered in hundredths of millimeters.

System Variable Value:

-1 : set the line weight to be BYLAYER

-2 : set the line weight to be BYBLOCK

-3 : set the line weight to be DEFAULT. The DEFAULT value is determined by LWEDFAULT system variable.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1362>