

# CHAMFERB system variable

1366 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 3743

## Function Description:

The **CHAMFERB** system variable is used to set the first chamfer distance when CHAMMODE has set to be 0.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1366>