

CLEANSCREENSTATE system variable

1372 GstarCAD MY /KW April 11, 2022 [System Variables](#) 0 4985

Function Description:

The **CLEANSCREENSTATE** system variable is used to specify the full screen state to be turned on or off.

(Read-Only)

Type : Integer

Saved in : Not saved

Initial value : 0

Range : 0,1

System Variable Value:

0 : turn off

1 : turn on

Related tutorial video:

- [Ribbon](#) 00:33
- [Toolbars](#) 00:47
- [Menus and Shortcut Menus](#) 00:47
- [View](#) 01:43
- [Extrude](#) 01:44
- [Visual Style](#) 01:47
- [Enter command on the command line](#) 01:50
- [Cleanscreenoff](#) 02:09
- [Cleanscreenon](#) 02:09
- [Cleanscreenstate system variable](#) 02:09
- [Status bar related setting](#) 02:21
- [Dynamic input](#) 02:28
- [Options command](#) 02:39

Above video sources from [TUTORIAL - GETTING STARTED WITH GSTARCAD](#), enrol now for free.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1372>