

## CMLEADERSTYLE system variable

1380 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 4290

### Function Description:

The **CMLEADERSTYLE** system variable is used to set the name of current mleader style.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : Standard

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1380>