

CMLJUST system variable

1381 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 3903

Function Description:

The **CMLJUST** system variable is used to specify alignment for multiple line.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : top

1 : zero(middle)

2 : bottom

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1381>