

CMLSCALE system variable

1382 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 4028

Function Description:

The **CMLSCALE** system variable is used to control global line weight for multiple line.

Type : Integer

Saved in : Drawing

Initial value : 1.0000(Imperial) or 20.0000 (Metric)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1382>