

CTABLESTYLE system variable

1393 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 4278

Function Description:

The **CTABLESTYLE** system variable is used to set name for current table style.

Type : Strings

Saved in : Drawing

Initial value : standard

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1393>