

CURSORSIZE system variable

1394 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 4703

Function Description:

The **CURSORSIZE** system variable is used to determine the cursor size by degrees of screen.

Type : Integer

Saved in : Registry

Initial value : 5

Range : 1% ~100%

The valid range is from 1% to 100%. When setting to 100%, the cursor displays in full screen, users could not see the endpoint of cursor. When setting to smaller than 100%, moving the cursor to the edge of screen, users could see the endpoint of cursor.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1394>