

# CVPORT system variable

1395 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 3916

## Function Description:

The **CVPORT** system variable is used to change identification code in current viewport.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 2

## System Variable Value:

Users could change current viewport by setting the CVPORT system variable, first they should meet the following conditions:

1. The specified identification code should be one active viewport code.
2. The cursor has not been locked and it could move to viewport when executing a command.
3. The Tablet mode has turned off.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1395>