

DATE system variable

1398 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 4002

Function Description:

The **DATE** system variable is used to store current date and time in specified format.
(Read-Only)

Type : Real

Saved in : Not saved

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1398>