

## DATE system variable

1398 GstarCAD MY /KW July 9, 2021 [System Variables](#) 0 3911

### Function Description:

The **DATE** system variable is used to store current date and time in specified format.  
(Read-Only)

**Type** : Real

**Saved in** : Not saved

**Initial value** : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1398>