

# DCTMAIN system variable

1403 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2402

## Function Description:

The **DCTMAIN** system variable is used to display the three letter keyword for the current main spelling dictionary.

**Type** : Strings

**Saved in** : Registry

**Initial value** : Varies by country/region

**Range** : 0,1,2,4

## System Variable Value:

### Keyword Language name

enu American English

eng British English (ise)

enc Canadian English

cat Catalan

csy Czech

dan Danish

nld Dutch (primary)

fin Finnish

fra French (accented capitals)

frc French (unaccented capitals)

deu German (post-reform)

deo German (pre-reform)

ita Italian

nor Norwegian (Bokmal)

ptb Portuguese (Brazilian)

ptg Portuguese (Iberian)

rus Russian

esp Spanish

sve Swedish

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1403>