

DGNMAPPINGPATH system variable

1410 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2415

Function Description:

The **DGNMAPPINGPATH** system variable is used to set the dgnsetups.ini file location for storing DGN mapping settings.

(Read-Only)

Type : Strings

Saved in : Registry

Initial value : Unknown

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1410>