

# DIMALT system variable

1414 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2326

## Function Description:

The **DIMALT** system variable is used to control the display of alternate units in dimensions.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Turn off

## System Variable Value:

**Off** : disable alternate units

**On** : enable alternate units

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1414>