

## DIMALTD system variable

1415 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2160

### Function Description:

The **DIMALTD** system variable is used to control the number of decimal places in alternate units.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 2 (Imperial)or 3 (Metric)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1415>