

# DIMALTZ system variable

1421 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1887

## Function Description:

The **DIMALTZ** system variable is used to control zero suppression for alternate units in a dimension.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0 ~ 15

## System Variable Value:

**0** : suppress zero feet and zero inch

**1** : include zero feet and zero inch

**2** : include zero feet and suppress zero inch

**3** : include zero inch and suppress zero feet

**4** : suppress leading zero for decimal dimension

**8** : suppress trailing zero for decimal dimension

**12** : suppress leading and trailing zeros

The **DIMALTZ** system variable of 0,1,2, and 3 only have effect on dimensions for inches and feet.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1421>