

# DIMANNO system variable

1422 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2084

## Function Description:

The **DIMANNO** system variable is used to specify whether the current dimension style is annotative style or not.

(Read-Only)

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1

## System Variable Value:

**0** : nonannotative

**1** : annotative

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1422>