

DIMASZ system variable

1426 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2029

Function Description:

The **DIMASZ** system variable is used to control size of dimension line and leader arrow. It also controls size of baseline.

Type : Real

Saved in : Drawing

Initial value : 0.1800(Imperial) or 2.5000 (Metric)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1426>