

# DIMAUNIT system variable

1428 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2228

## Function Description:

The **DIMAUNIT** system variable is used to set unit format for angular dimension.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0 ~ 4

## System Variable Value:

**0** : decimal degrees

**1** : degrees/minutes /seconds

**2** : gradians

**4** : radians

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1428>