

# DIMBLK system variable

1430 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2597

## Function Description:

The **DIMBLK** system variable is used to set the display of arrow block on the end extension line.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

Users could enter a Period "." to restore default settings.

Note: the annotative block could not be used as customized arrow for dimensions and leaders.

## System Variable Value:

"" : closed filled  
"\_DOT" : dot  
"\_DOTSMALL" : dot small  
"\_DOTBLANK" : dot blank  
"\_ORIGIN" : origin indicator  
"\_ORIGIN2" : origin indicator 2  
"\_OPEN" : open  
"\_OPEN90" : right angle  
"\_OPEN30" : open 30  
"\_CLOSED" : closed  
"\_SMALL" : dot small blank  
"\_NONE" : none  
"\_OBLIQUE" : oblique  
"\_BOXFILLED" : box filled  
"\_BOXBLANK" : box  
"\_CLOSEDBLANK" : closed blank  
"\_DATUMFILLED" : datum triangle filled  
"\_DATUMBLANK" : datum triangle  
"\_INTEGRAL" : integral  
"\_ARCHICK" : architectural tick

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1430>