

## DIMBLK1 system variable

1431 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1513

### Function Description:

The **DIMBLK1** system variable is used to set arrowhead for the first end of extension line when the DIMSAH is on.

**Type :** Strings

**Saved in :** Drawing

**Initial value :** ""

Users could enter a Period "." to restore default settings.

Note: the annotative block could not be used as customized arrow for dimensions and leaders.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1431>