

DIMBLK2 system variable

1432 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2221

Function Description:

The **DIMBLK2** system variable is used to set arrowhead for the second end of extension line when the **DIMSAH** is on.

Type : Strings

Saved in : Drawing

Initial value : ""

Users could enter a Period "." to restore default settings.

Note: the annotative block could not be used as customized arrow for dimensions and leaders.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1432>