

DIMCLRD system variable

1434 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2454

Function Description:

The **DIMCLRD** system variable is used to specify color for extension lines, arrowheads and dimension lines.

Type : Integer

Saved in : Drawing

Initial value : 0

It could also controls the leader color created by **LEADER** command. In "Select Color" dialog box, input "0" to select "**BYBLOCK**"; input "256" to select "**BYLAYER**".

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1434>