

DIMDEC system variable

1437 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2162

Function Description:

The **DIMDEC** system variable is used to set the number of decimal places in main units for dimensions.

Type : Integer

Saved in : Drawing

Initial value : 4 (Imperial) or 2 (Metric)

The previous is based on selected units or angle formats. The specified value will be applied on angular dimension when the **DIMDEC** system variable set to be -1.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1437>