

## DIMDLE system variable

1438 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2658

### Function Description:

The **DIMDLE** system variable is used to set the distance the dimension line extends beyond the extension line when oblique strokes are created instead of arrowheads.

**Type :** Real

**Saved in :** Drawing

**Initial value :** 0.0000

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1438>