

## DIMDLI system variable

1439 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2345

### Function Description:

The **DIMDLI** system variable is used to control the extension line distance in baseline dimensions.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.3800(Imperial) or 3.7500(Metric)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1439>