

DIMEXO system variable

1442 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2523

Function Description:

The **DIMEXO** system variable is used to specify the distance that the extension line offsets origin.

Type : Real

Saved in : Drawing

Initial value : 0.0625(Imperial) or 0.6250 (Metric)

The **DIMEXO** system variable value determines the minimum offset for constant length of extension lines.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1442>