

# DIMFIT system variable

1443 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 2845

## Function Description:

The **DIMFIT** system variable is used to position the text and arrow in or out the extension line.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 3

**Range** : 0 ~ 5

## System Variable Value:

- 0 : position the text and arrow in the extension line;
- 1 : position the text in the extension line and arrow out the extension line;
- 2 : position the text or arrow in the extension line;
- 3 : position the text and arrow in an optimal style;
- 4 : draw a leader if necessary;
- 5 : don't draw leader.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1443>