

# DIMTOH system variable

1451 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2638

## Function Description:

The **DIMTOH** system variable is used to control the position of dimension text.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : On (Imperial) or Off (Metric)

## System Variable Value:

**Off** : align text and dimension line

**On** : create text horizontally

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1451>