

## DIMFXLON system variable

1455 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2498

### Function Description:

The **DIMFXLON** system variable is used to control whether to set a constant value for extension line.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : off

When **DIMFXLON** is on, the length of extension line is specified by DIMFXL system variable.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1455>