

DIMLIM system variable

1461 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2383

Function Description:

The **DIMLIM** system variable is used to generate dimension limits as the default text.

Type : Parameter

Saved in : Drawing

Initial value : off

Specifying the DIMLIM to be on could close the **DIMTOL**.

System Variable Value:

off : dimension limits are not generated as default text

on : dimension limits are generated as default text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1461>