

DIMLTYPE system variable

1464 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2473

Function Description:

The **DIMLTYPE** system variable is used to set the linetype of dimension line.

Type : Strings

Saved in : Drawing

Initial value : ""

The **DIMLTEX1** system variable value is "BYLAYER", "BYBLOCK", or names of linetype.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1464>