

# DIMLWE system variable

1467 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 2197

## Function Description:

The **DIMLWE** system variable is used to specify lineweight for extension line.

**Type** : Enum

**Saved in** : Drawing

**Initial value** : -2

**Range** : 0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

## System Variable Value:

**-3** : default(the default value is controlled by LWDEAULT system variable)

**-2** : byblock

**-1** : bylayer

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=1467>